




**Perfect<sup>™</sup>  
Pint**

# Sovereign Glasswasher

Operating Instructions

# Customer Training

## User Controls

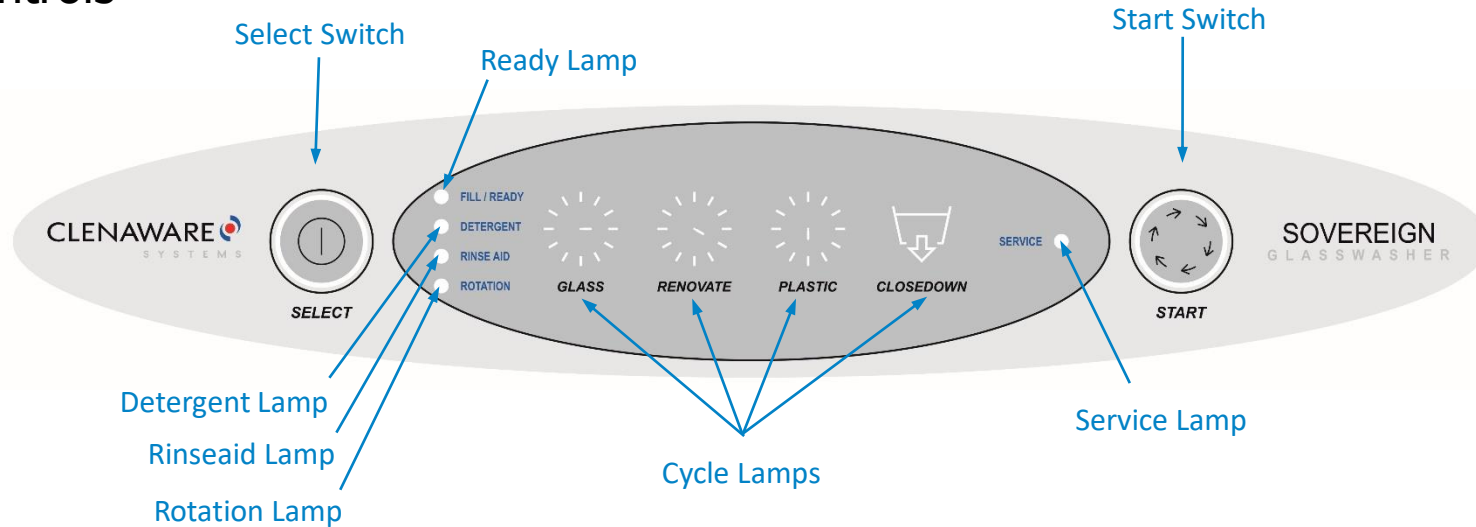

### Two soft touch switches

Select Switch:

Press to switch the machine on.  
Illumination changes to blue from red when the machine is on.  
This switch is also used to select the desired cycle.

Start Switch:

Press to start the chosen cycle.  
Lit green (rotating) while in cycle or when the machine is filling.

## Information Lamps

- Ready Lamp: Illuminates green when the machine is ready for wash cycles.
- Detergent Lamp: Normally lit green. If lit orange then detergent needs replacing.
- Rinse-Aid Lamp: Normally lit green. If lit orange then rinse-aid needs replacing.
- Rotation Lamp: Normally lit green. Lit red then one of the wash arms is not rotating.
- Cycle Lamps: Use the Select Switch to choose from the following cycles:-
- Glass (default)
  - Renovate
  - Plastic
  - Closedown
- The relevant lamp will be lit blue.
- Service Lamp: This will flash red if the machine has a functional error.

## Customer Training

### Operating Instructions

#### Filling The Machine At The Start Of The Day

- Ensure that the Power and Water supplies are on
- Press the Select Switch. The Select Switch will be lit blue
- The machine will perform a filling and heating sequence
- Once complete, the Ready Lamp will be lit green, and the Glass Lamp will be lit blue
- The machine is now in standby waiting for wash cycles to be started

## Customer Training

### Operating Instructions

#### Load A Basket With Glasses

- Remove dregs and solids from the glasses before loading into the basket
- Place the inverted glasses into the rack. i.e. The entire lip surface of each individual glass to face downwards in the basket base
- Never mix normal and plastic glassware
- To save energy, completely fill the basket with glasses before washing
- Open the door and carefully slide the basket into the machine

## Customer Training

### Operating Instructions

#### Starting A Glass Or Plastics Wash Cycle

- The default cycle type is 'Glass' for normal glassware. If washing plastic glassware, press the Select Switch until the 'Plastic' Lamp is lit
- Press the Start Switch. The Start Switch will be lit green (rotating).
- The cycle will operate automatically, Washing, Emptying, and Rinsing.
- The end of the 2 minute\* cycle is indicated by an audible alarm and the Start Switch will no longer be lit
- Open the door and carefully remove the basket of washed glasses. Close the door
- The machine is ready for the next wash cycle

## Customer Training

### Operating Instructions

#### Notes

- If the machine has been left idle (in standby) for longer than 40 minutes, a Refreshment Cycle will pre-cede the wash cycle. The wash water will be replaced.
- Never open the door during a wash cycle
- Always wait until the end of the wash cycle before removing the basket of glasses
- Allow washed glasses to dry naturally or use an Airack to speed up the drying time. Never polish the glasses dry. This will contaminate the glasses

## Customer Training

### Operating Instructions

#### Starting A Renovate Cycle

- Load the machine as before, but manually add one measure of Renovate Powder into the wash chamber before closing the door
- Press the Select Switch until the Renovate Lamp is lit
- Press the Start Switch. The Start Switch will be lit green (rotating)
- The cycle will operate automatically, with two consecutive cycles consisting of Washing, Emptying, and Rinsing functions.
- The end of the 7 minute\* cycle is indicated by an audible alarm and the Start Switch will no longer be lit
- Open the door and carefully remove the basket of washed glasses. Close the door
- The machine is ready for the next wash cycle



## Customer Training

### Operating Instructions

#### Notes

- The Renovate Cycle is designed to restore glassware to original condition. The process removes non rinsing contaminants that can build up on the glassware over a period of time, or as a result of manually drying the glasses with a cloth.
- Do not use the Renovate Cycle on plastic glassware
- A Renovate Cycle is intended for occasional use only. Excessive use of the cycle will eventually damage glassware
- Take care when handling Renovate Powder

## Customer Training

### Operating Instructions

#### Closing Down The Machine At The End Of The Day

- Press the Select Switch until the Closedown Lamp is lit
- Press the Start Switch. The Start Switch will be lit green (rotating)
- The cycle will operate automatically, rinsing out the wash compartment and removing all water to waste.
- At the end of the 2-minute cycle, the machine will de-energise and the Select Switch will change from blue to red

It is recommended that that the Power and Water supplies are isolated at the wall.

Leaving the door ajar will help dry the wash compartment and keep the machine fresh.